



**SPACE**MAKER

IMPROVING YOUR HOME WITH STYLE

## Wardrobe Installation Guide

**Spacemaker Wardrobes**

Phone: 1300 663 625 Fax: 0755 798 156 Email: [info@spacemakerwardrobes.com.au](mailto:info@spacemakerwardrobes.com.au)

[www.spacemakerwardrobes.com.au](http://www.spacemakerwardrobes.com.au)

## Step 1:

Using your tape measure, mark a the wall at 1980mm up from the floor (pic 1)

Using the level, mark a level line accross the entire length of the wardrobe opening (pic 2).

This line will serve as the guide for the hanging rail.



## Step 2:

Holding the wall rail on top of the line, find a stud around the centre of the wall rail. A good way to find the studs is to tap the wall and listen for the location of the studs (pic 3).


Drill a 5mm pilot hole through the wall rail into one of the studs in the centre of the wall (pic 4).

Next, fix the wall rail to the wall using a batten screw (pic 5).

If you have concrete walls, you will need a hammer drill to fix the wall rail to the wall.


Once you have one screw in, it is much easier to then finish off drilling and fixing the rest of the screws in place to all the studs along the wall.

Fix the wall rail in place using the hex head batten screws. The screws only need to be firm. Do not over-tighten the screws, as this may damage your wall (pic 6).

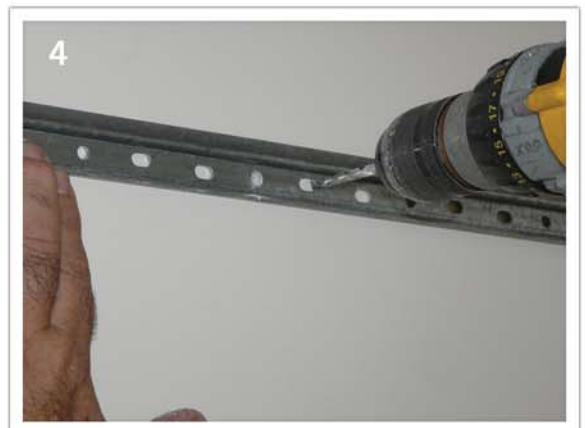

### Step 3:

Sit the U channel on top of the wall rail and mark a horizontal line on the wall above the channel in line with the batten screws. You will also need to mark a vertical line on the U channel in the same place (pic 1).

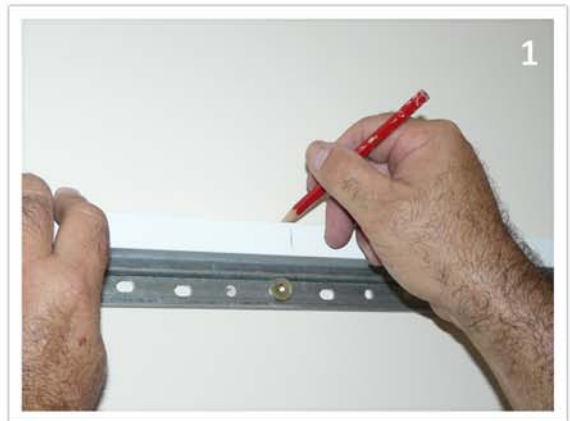

### Step 4:

Drill a pilot hole in the U channel with the 1/8th drill bit (pics 2 & 3).

It is advised to do this on a surface that does not matter if is damaged.



### Step 5:

Hold the U channel on the line and fix into place with the 28mm chip board screws (pic 4).

Next place the plastic capping over the wall rail and clip into place. When placing the plastic capping on the wall rail, it may be necessary to use a hammer to tap it lightly in order to clip it in place (pic 5 & 6).

Clean using soapy water or cream cleaner (pic 7).



**Step 6:**


Using a tape measure, mark out the entire wardrobe as per the drawings (pics 1 & 2).

**Step 7:**

Screw the boxes together with appropriate shelves, using the 6 gauge x 38mm screws. The shelves must be fixed in place with the face of the shelf up. The face of the shelf is indicated by a small black mark on the back of the shelf (see pic 3).

The shelves must also be fixed flush with the back of the gables. To do this, the gables need to be laying front edge down so that the shelves can be lined up flush at the back (see pics 4 to 7).

After the box is fixed together, you can stand it upright( pic 8).

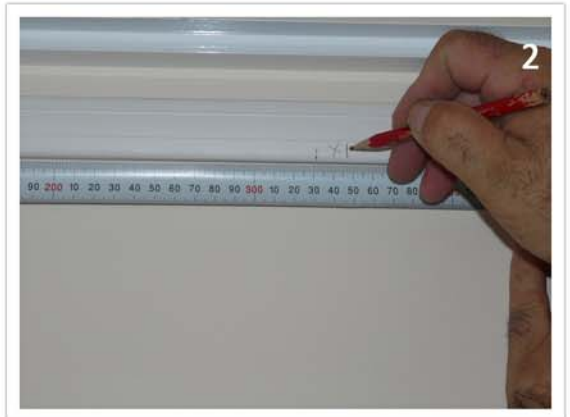



**Step 8:**

Put one of the end gables in place, and then sit the top shelf in place above the U Channel (pics 1, 2, 3 & 4).

After the top shelf is in place, the rest of the boxes and gables can be put on the wall in place (pic 5).

The gables are all numbered in sequence from left to right.



**Step 9:**

After all the gables are in place, the top shelf needs to be slotted into the U channel, ensuring that the back of the top shelf fits completely into the U channel. Pictures 6 & 7 show the top shelf before being fitted into the U channel, and pictures 8 & 9 show the top shelf fitted into the U channel.





**Step 10:**

Adjust gable supports into the wall and firm up against top shelf (pics 1, 2 & 3). Place hanging rods and shelves into appropriate positions. Drawers can also be fitted (pics 4, 5 & 6).

Once everything is in position, the top shelf can be screwed down into gables using 6 gauge x 38mm screws (drill pilot holes first - see pics 7 & 8).

The wardrobe can now be cleaned, and star caps put on visible screws. Pic 9 shows a completed wardrobe.

